


# High Volume Water Heating (shown with 1-1/4" components)

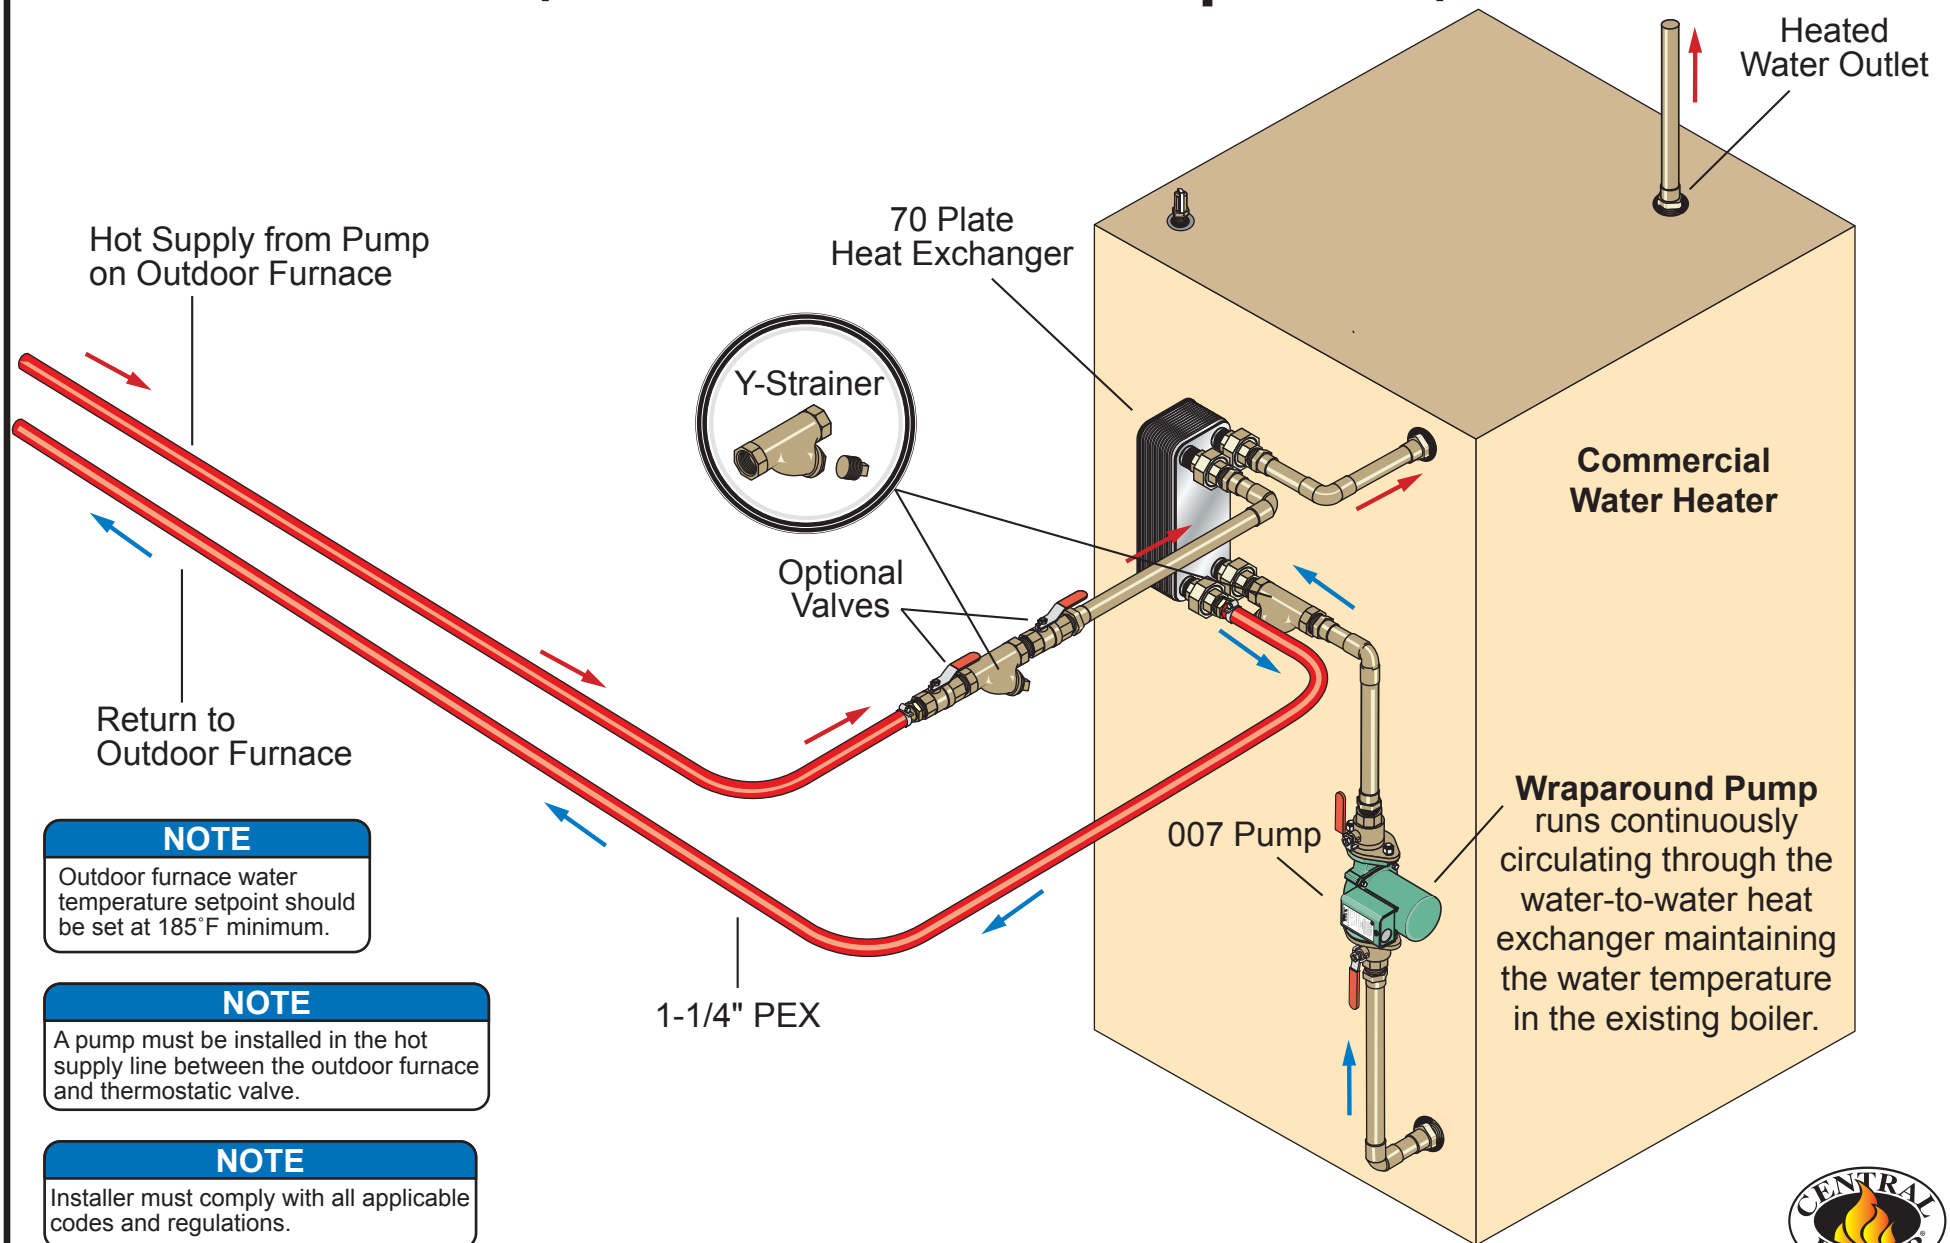

## NOTE

Outdoor furnace water temperature setpoint should be set at 185°F minimum.

## NOTE

A pump must be installed in the hot supply line between the outdoor furnace and thermostatic valve.

## NOTE

Installer must comply with all applicable codes and regulations.

