



# Outdoor Furnace and Forced Air Wiring Configuration with No Zone Valve

24-V Multi-stage Thermostat (p/n 587)

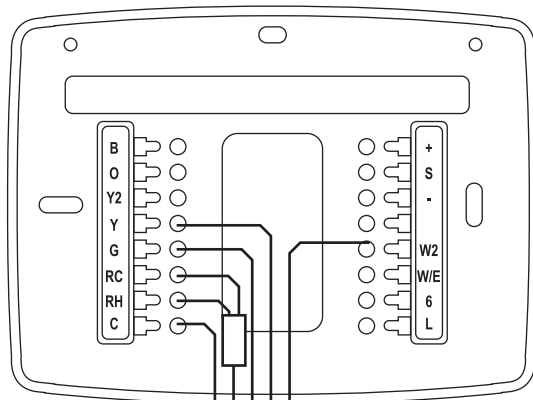

**NOTE**  
Change Installer Setup menu:  
**ITEM 2.** to ELE to force thermostat to turn blower on.

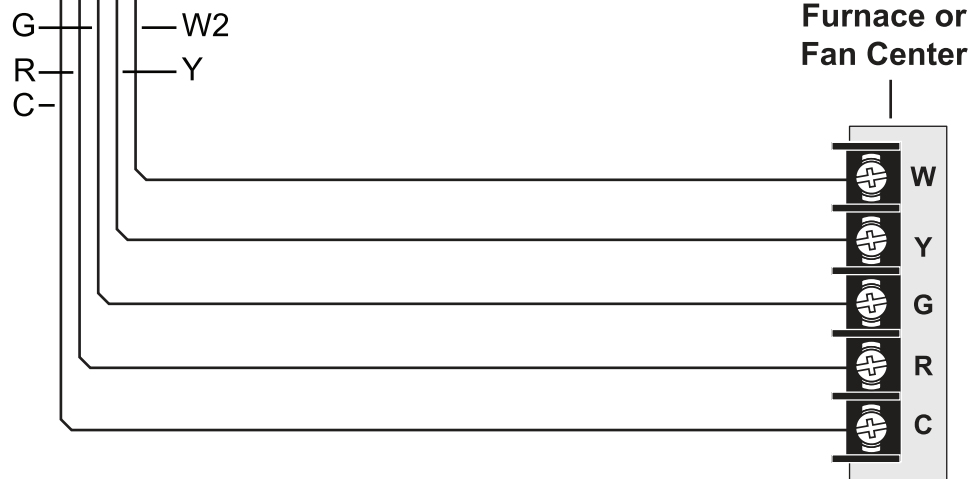

For illustration purposes only:  
• Location of thermostat may vary.  
• Not for heat pump application.

**NOTE**  
Thermostats must be installed by qualified technician.

