


Wall-Hung Boiler

NOTE

Minimum 20-plate exchangers are recommended; size accordingly to system.

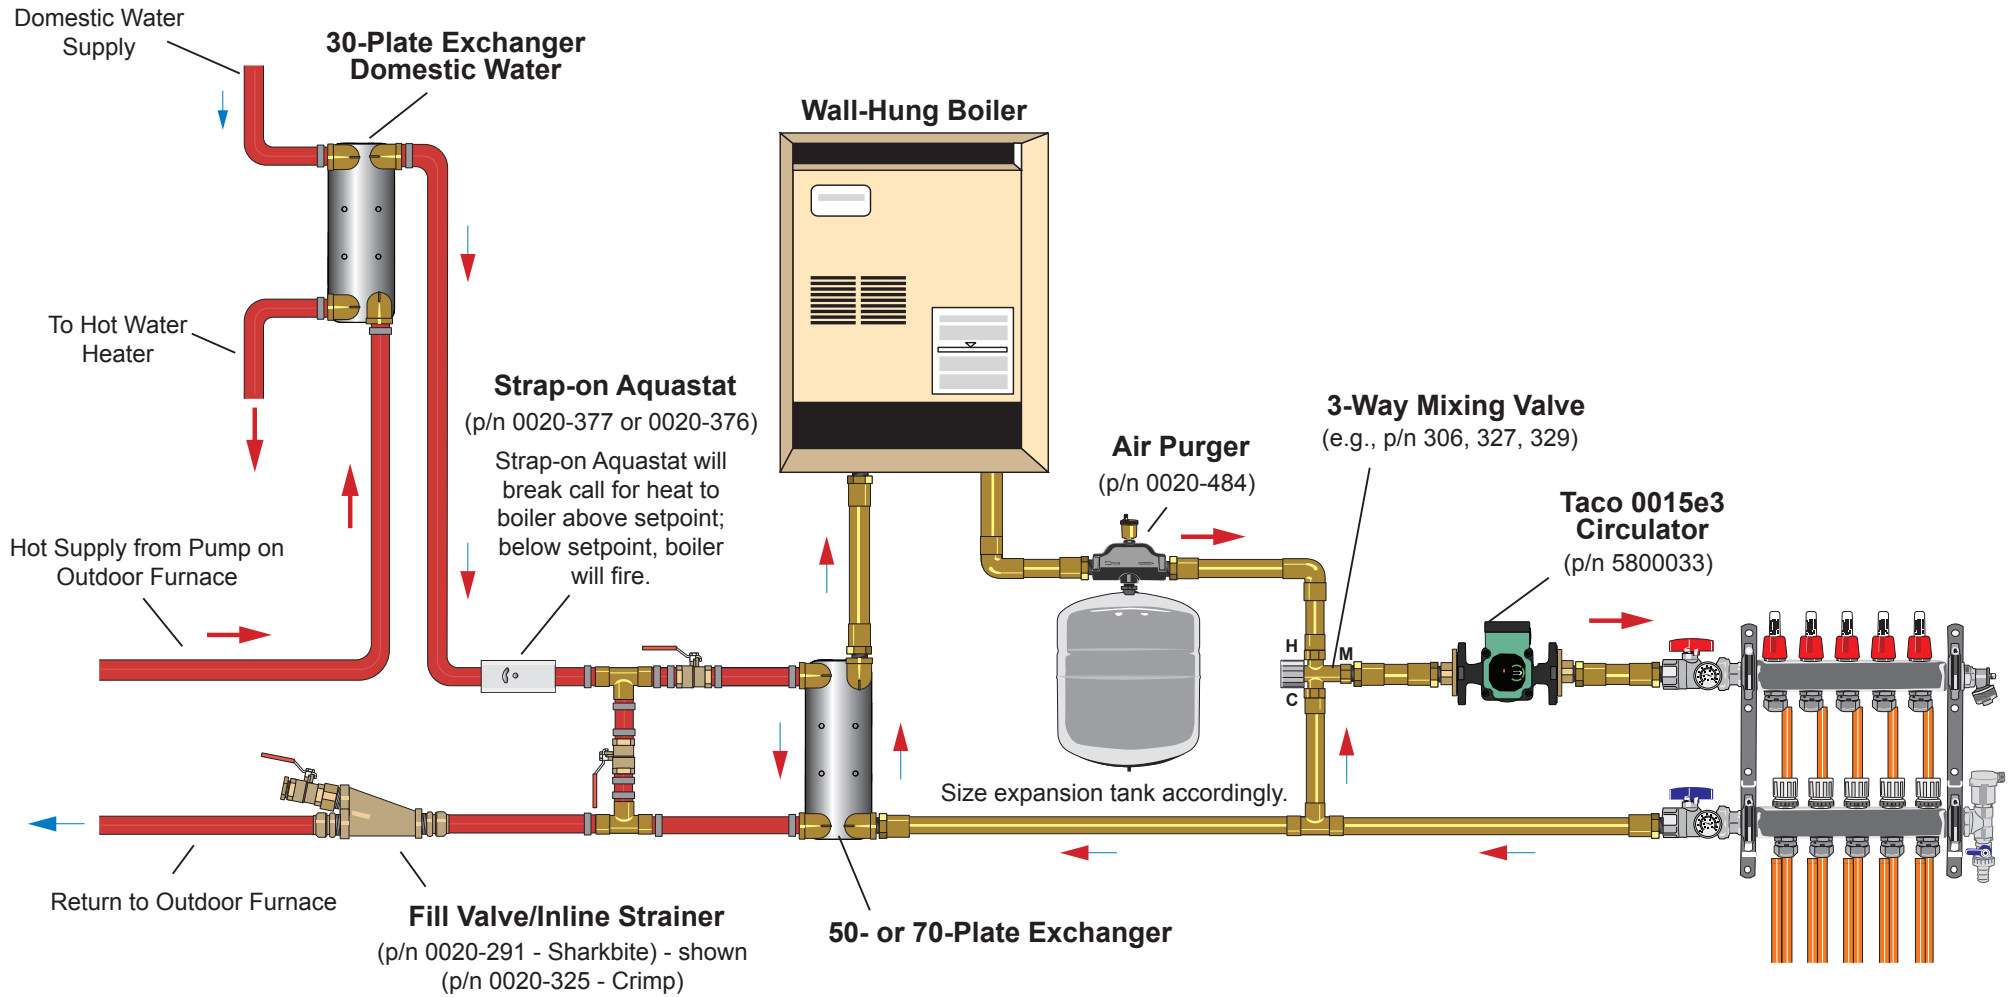

NOTE

Installer must comply with all applicable codes and regulations.

NOTE

A pump must be installed in the hot supply line between the outdoor furnace and thermostatic valve.

NOTE

Outdoor furnace water temperature setpoint should be set at 185°F minimum.