



# Three Stage with Heat Pump

## Stage One (Outdoor Furnace), Stage Two (Heat Pump) and Stage Three (LP Gas, Natural Gas, Oil or Electric Furnace)

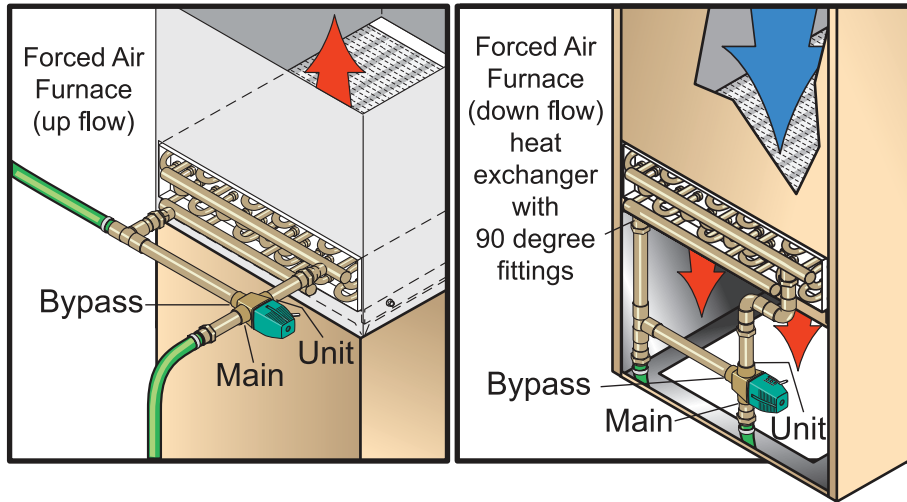

24-V Thermostat (p/n 587)

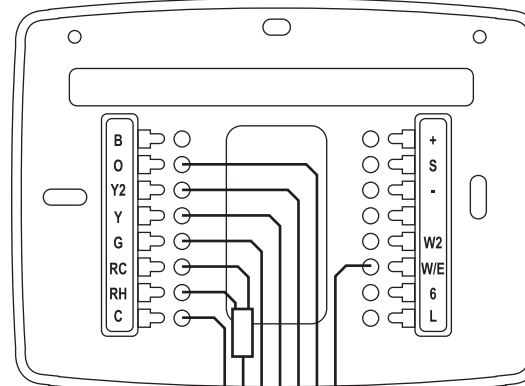



**NOTE**

See thermostat manual for setup changes. The following items must be changed:  
**MENU 1. HP2** - Allows 3 stage operation.  
**MENU 2. ELE** - Thermostat turns fan ON during call for heat.

**NOTE**

Thermostats must be installed by qualified technician.

Field Supplied DPDT Winter/Summer Switch

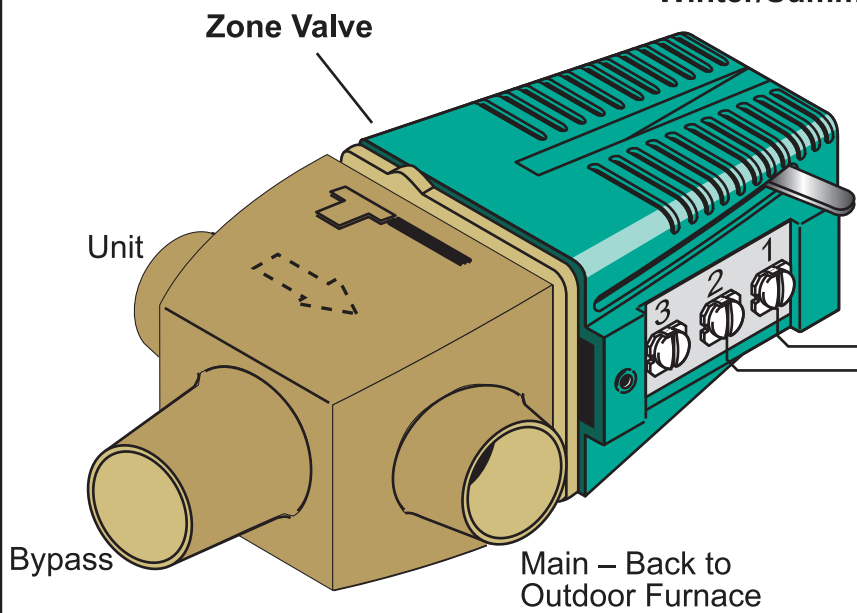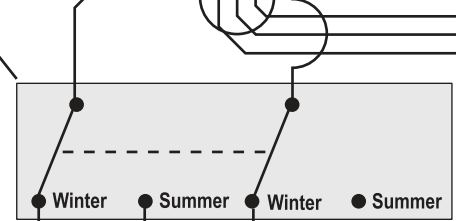

**NOTE**  
 This wiring assumes "O" terminal is energized during cooling mode.

For illustration purposes only:  
 • Location of thermostat may vary.



Furnace Terminal Block

